

Cross-reference guide: Armstrong, B&G and TACO to Grundfos

Manufacturer	Model	Port-to-port length	Flange size	Grundfos model	Port-to-port length	Flange size	
Armstrong	ARMflo E21	8-1/2"	1-1/2"	UP43-110F	8-1/2"	1-1/2"	
	ARMflo E23	8-1/2"	1-1/2"	UP43-110F	8-1/2"	1-1/2"	
	S 45	10"	2-1/2", 3"	UP53-45F*	9-7/8"	2", 2-1/2", 3"	
	S 46	10"	2-1/2", 3"	UP53-46F*	9-7/8"	2", 2-1/2", 3"	
	S 55	12"	3"	UPS53-55/57F*	11-7/8"	2", 2-1/2", 3"	
	S 57	12"	3"	UPS53-55/57F*	11-7/8"	2", 2-1/2", 3"	
	S 69	14-1/4"	3"	UPS75-69F*	14"	2", 2-1/2", 3"	
	H51	11-1/2"	1"	UPS32-80/2*□	11"	3/4" to 1-1/2"	
	H52	11-1/2"	1"	UPS32-80*□	11"	3/4" to 1-1/2"	
	H53	11-1/2"	1-1/2"	UPS40-160/2*	11-1/2"	1-1/2"	
	H54	11-1/2"	2"	UPS50-80/2*	11-1/2"	2"	
	H63	13-1/2"	1-1/2"	UPS32-160/2*	13-1/2"	1-1/2"	
	H64	13-1/2"	1-1/2"	UPS32-160/2*	13-1/2"	1-1/2"	
	H65	13-1/2"	1-1/2"	UPS40-240/2*	13-1/2"	1-1/2"	
	H66	14"	2"	UPS50-160/2*	14"	2"	
	H67	14"	2"	UPS50-160/2*	14"	2"	
	H68	14"	2"	UPS50-240/2*	14"	2"	
	1050 1B (1/4HP)	11-1/2"	1"	UPS32-80/2*□	11"	3/4" to 1-1/2"	
	1050 1-1/4B (1/4HP)	11-1/2"	1-1/4"	UPS32-80/2*□	11"	3/4" to 1-1/2"	
	1050 1-1/2B (1/4HP)	11-1/2"	1-1/2"	UPS32-80/2*□	11"	3/4" to 1-1/2"	
	1050 2B (1/3HP)	11-1/2"	2"	UPS50-80/4*	11-1/2"	2"	
	1050 2B (1/2HP)	11-1/2"	2"	UPS50-80/4*	11-1/2"	2"	
	1050 2B (3/4HP)	11-1/2"	2"	UPS50-80/4*	11-1/2"	2"	
	1060 1-1/2 D (1/2HP)	13-1/2"	1-1/2"	UPS32-160/2*	13-1/2"	1-1/2"	
	1060 1-1/2 D (3/4HP)	13-1/2"	1-1/2"	UPS32-160/2*	13-1/2"	1-1/2"	
	1060 1-1/2 D (1-1/2HP)	13-1/2"	1-1/2"	UPS40-240/2*	13-1/2"	1-1/2"	
	1060 2D (3/4HP)	14"	2"	UPS50-160/2*	14"	2"	
	1060 2D (1HP)	14"	2"	UPS50-160/2*	14"	2"	
	1060 2D (1-1/2HP)	14"	2"	UPS50-160/2*	14"	2"	
	1060 2D (2HP)	14"	2"	UPS50-240/2*	14"	2"	
	TACO	120	11"	2"	UPS32-40/4*□	11"	3/4" to 1-1/2"
		131	13-5/8"	3"	UP53-45F*□	10"	2", 2-1/2", 3"
133		13-5/8"	3"	UPS53-55/57*□	11-7/8"	2", 2-1/2", 3"	
1600		10-1/4"	1-1/2"	UPS32-80/2*	11"	1-1/2"	
1610		10-1/4"	1-1/2"	UPS32-80/2*	11"	1-1/2"	
1612		13-1/2"	1-1/2"	UPS32-160/2*	13-1/2"	1-1/2"	
1614		13-1/2"	1-1/2"	UPS32-160/2*	13-1/2"	1-1/2"	
1616		14-1/2"	2"	UPS40-240/2*□	13-1/2"	1-1/2"	
1630		13-1/2"	2"	UPS50-80/4*□	11-1/2"	2"	
1632		13-1/2"	2"	UPS50-160/2*	14"	2"	
1634		13-1/2"	2"	UPS50-160/2*	14"	2"	
1636		16-1/2"	2"	UPS50-240/2*□	14"	2"	
1638		16-1/2"	2"	UPS50-240/2*□	14"	2"	

* Bronze version to be used in open systems.
□ Replacement model requires piping and/or flange modification.

Disclaimer: This cross-reference is a guide only. Use individual technical data sheets for correct comparison.

Cross-reference guide

VersaFlo® UP, UPS

Manufacturer	Model	Port-to-port length	Flange size	Grundfos model	Port-to-port length	Flange size
B&G	2-1/2"	10"	2-1/2"	UP53-45F★	9-7/8"	2", 2.5", 3"
	LD3	10"	3"	UP53-45F★	9-7/8"	2", 2.5", 3"
	HD3	10"	3"	UP53-46F★	9-7/8"	2", 2.5", 3"
	PD-35	12"	3"	UPS53-55/57F★	11-7/8"	2", 2.5", 3"
	PD-37	12"	3"	UPS53-55/57F★	11-7/8"	2", 2.5", 3"
	PD-38	14-1/2"	3"	UPS75-69F★	14"	2", 2.5", 3"
	PD-40	14-1/2"	3"	UPS50-160/2★□	14"	2"
	601	11"	1"	UPS32-80/2★	11"	3/4" to 1-1/2"
	602	11"	1"	UPS32-80/2★	11"	3/4" to 1-1/2"
	603	11"	1"	UPS50-80/2★□	11-1/2"	2"
	604	11"	1-1/4"	UPS32-80/2★	11"	3/4" to 1-1/2"
	609	11-1/2"	1-1/2"	UPS40-160/2★	11-1/2"	1-1/2"
	610	11-1/2"	2"	UPS50-80/4★	11-1/2"	2"
	621	13-1/2"	2"	UPS40-80/4	13-1/2"	1-1/2"
	614	13-1/2"	1-1/2"	UPS40-240/2	13-1/2"	1-1/2"
	615	13-1/2"	2"	UPS50-160/2	14"	2"
	616	13-1/2"	2"	UPS50-160/2	14"	2"
	622	13-1/2"	1-1/2"	UPS32-160/2	13-1/2"	1-1/2"
	623	13-1/2"	1-1/2"	UPS40-240/2	13-1/2"	1-1/2"
	617	13-1/2"	1-1/2"	UPS40-240/2	13-1/2"	1-1/2"
	624	14"	2"	UPS50-160/2	14"	2"
	625	14"	2"	UPS50-240/2	14"	2"
	60-11	11"	1-1/4"	UPS32-80/2★	11"	3/4" to 1-1/2"
	60-13	11-1/2"	1-1/2"	UPS40-160/2★	11-1/2"	1-1/2"
	60-14	11-1/2"	2"	UPS50-80/2★	11-1/2"	2"
	60-15	13-1/2"	1-1/2"	UPS32-160/2	13-1/2"	1-1/2"
	60-16	13-1/2"	1-1/2"	UPS32-160/2	13-1/2"	1-1/2"
	60-17	13-1/2"	1-1/2"	UPS40-240/2	13-1/2"	1-1/2"
	60-19	14"	2"	UPS50-160/2	14"	2"
	60-20	14"	2"	UPS50-160/2	14"	2"
	60-21	14"	2"	UPS50-240/2	14"	2"

★ Bronze version to be used in open systems.

□ Replacement model requires piping and/or flange modification.

Disclaimer: This cross-reference is a guide only. Use individual technical data sheets for correct comparison.