

PACO VLC

Pos.	Description
1A	Volute
2K	Backplate
3A*	Impeller
4A*	Case wear ring
4F	Balance ring
5A*	Shaft sleeve
8A*	Impeller screw
8B	Volute screw
8H	Plate screw
8I	CUE screw
8N	Motor screw
11A*	Volute gasket
11F*	Bracket gasket
12A*	Impeller key
13G	Slinger
14A*	Seal assembly
16A	Pipe plug
20J	Cast iron stand
21A	Motor bracket
34B	Impeller washer
34D	Plate washer
34E	CUE flat washer
34F	CUE lock washer
35G	Plate nut
35H	CUE nut
45A	Shock isolator
55A	Mounting plate
65A	Motor
75A	CUE

* Recommended spare parts

